KS250 AND KS280

HINGED DOOR DRILLING TEMPLATE

KEYLESS SOLUTIONS

Keyless Solutions
09 238 2377
sales@keylesssolutions.nz
keylesssolutions.nz

DOOR THICKNESS

35 mm door
40 mm door
45 mm door
50 mm door
55 mm door

FACEPLATE **60**
FACEPLATE **50**
POCKET **60**
POCKET **50**
HANDLE LINE
FACEPLATE **50**
POCKET **60**
FACEPLATE **60**

FACE
door edge

TEAR OFF THE FACE STRIP HERE

BACKSET 60: FOLD HERE
BACKSET 50: FOLD HERE

STILE INTERNAL / EXTERNAL

Another backset: mark every hole from the paper template in the box.
If anything here differs from the paper template in the box, follow the paper template and call us. We are on 09 238 2377.

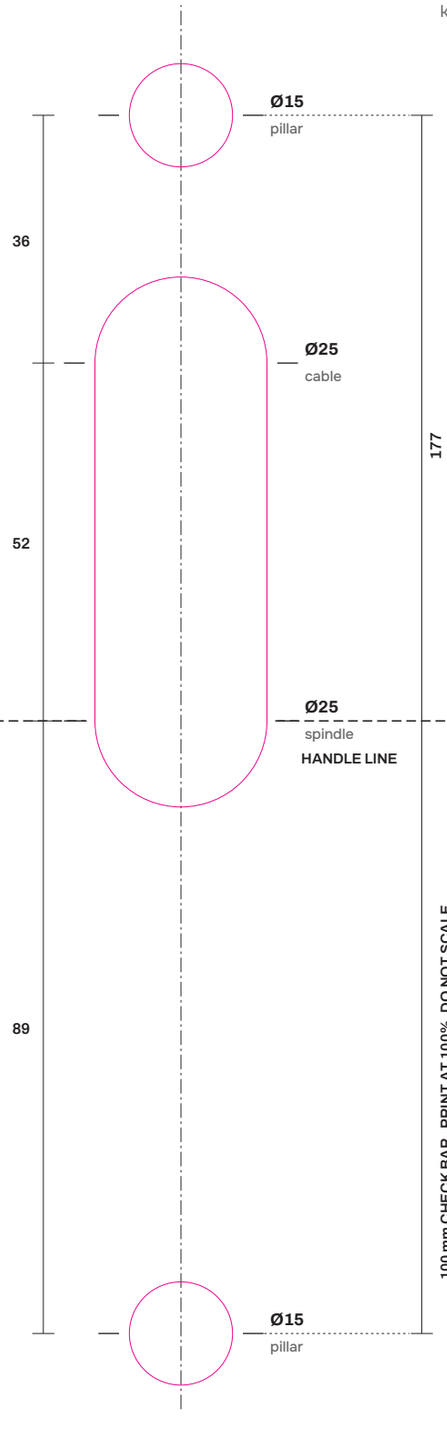

CASE SIZES mm

backset	faceplate	pocket
50	180 x 22	105 x 17.5
60	241 x 22	175 x 17.5

Other backsets: use the paper template in the box

BACKSET 60: FOLD HERE
BACKSET 50: FOLD HERE

HOW TO USE THIS CARD

1. Draw a pencil line across the door face and the door edge where you want the handle.
2. Fold the card on YOUR backset line, 50 or 60.
3. Hook the fold over the door edge. HANDLE LINE on your pencil line. Mark the holes. Turn the card over and mark the other side of the door.
4. Tear off the FACE strip.
5. Hold the strip on the door edge. Put both ends of your door's line on the two corners. HANDLE LINE on your pencil line. Mark the faceplate and pocket ends where the lines meet the door's corners.

Depths: take them from the paper template in the box.

KEYLESS SOLUTIONS

KS250 AND KS280

HINGED DOOR DRILLING TEMPLATE

Keyless Solutions
09 238 2377
sales@keylesssolutions.nz
keylesssolutions.nz

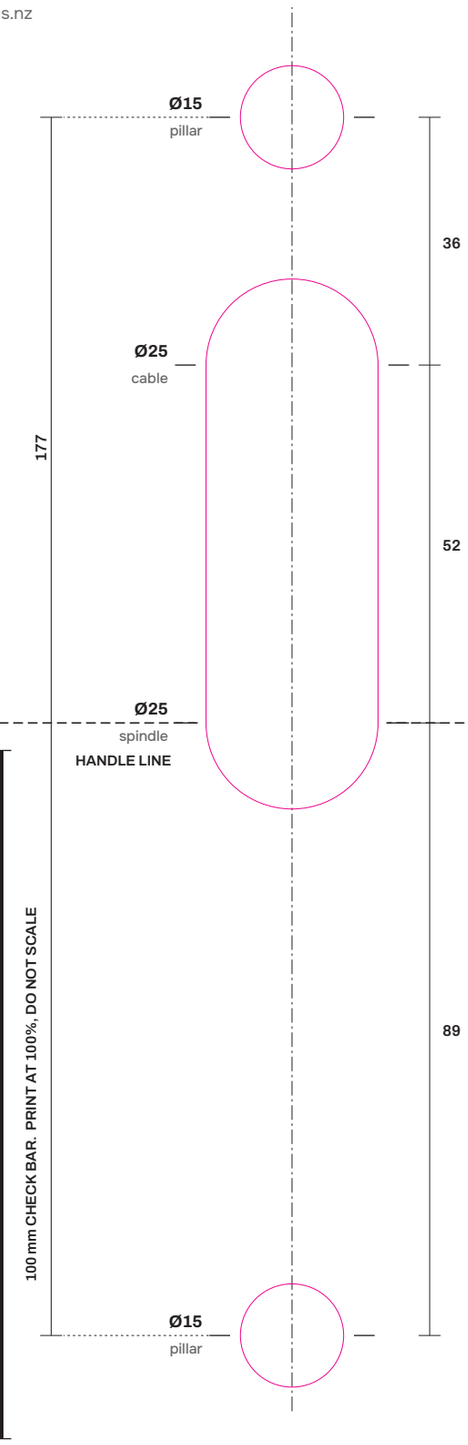

BACKSET 50: FOLD HERE

BACKSET 60: FOLD HERE

STILE INTERNAL / EXTERNAL

Another backset: mark every hole from the paper template in the box.
If anything here differs from the paper template in the box, follow the paper template and call us. We are on 09 238 2377.

CASE SIZES mm

backset	faceplate	pocket
50	180 x 22	105 x 17.5
60	241 x 22	175 x 17.5

Other backsets: use the paper template in the box

HOW TO USE THIS CARD

1. Draw a pencil line across the door face and the door edge where you want the handle.
2. Fold the card on YOUR backset line, 50 or 60.
3. Hook the fold over the door edge. HANDLE LINE on your pencil line. Mark the holes. Turn the card over and mark the other side of the door.
4. Tear off the FACE strip.
5. Hold the strip on the door edge. Put both ends of your door's line on the two corners. HANDLE LINE on your pencil line. Mark the faceplate and pocket ends where the lines meet the door's corners.

Depths: take them from the paper template in the box.

BACKSET 50: FOLD HERE

BACKSET 60: FOLD HERE

DOOR THICKNESS



