KEYLESS SOLUTIONS

KS150 DEADBOLT DRILLING TEMPLATE

Keyless Solutions · 09 238 2377 · sales@keylesssolutions.nz · keylesssolutions.nz

FACE

door edge

Set the latch to your backset first. UP on the latch at the top.

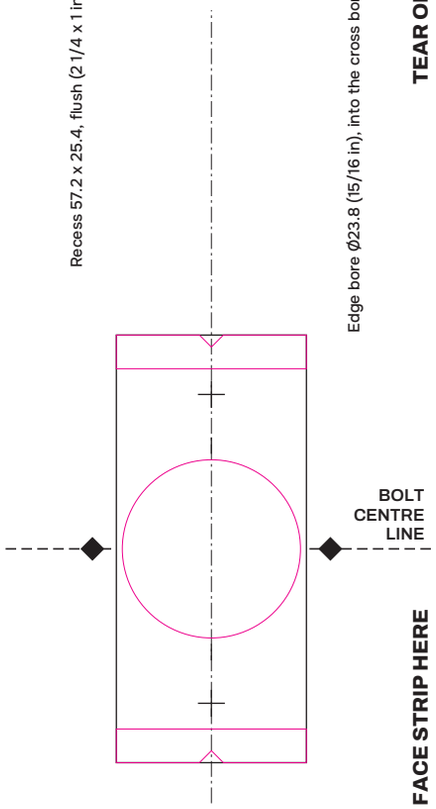

DOOR THICKNESS

Put both ends of your door's line on the two corners of the door edge. The strip is now centred.

40 mm door

45 mm door

50 mm door

55 mm door

TEAR OFF THE FACE STRIP HERE

BACKSET 70 (2 3/4 in): FOLD HERE

BACKSET 60 (2 3/8 in): FOLD HERE

STILE INTERNAL / EXTERNAL

UPPER HOLE IS NOT ON THIS CARD
Mark it and drill it from the paper template in the box, on your backset line, at the size printed there.

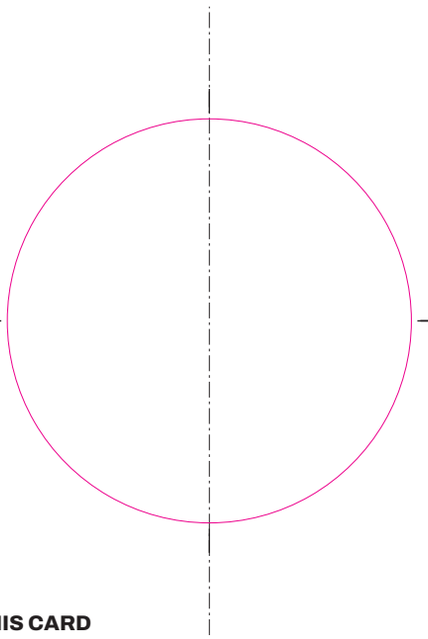

TEAR OFF THE FACE STRIP HERE

BACKSET 70 (2 3/4 in): FOLD HERE

BACKSET 60 (2 3/8 in): FOLD HERE

HOW TO USE THIS CARD

1. Draw a pencil line across the door face and the door edge where you want the bolt.
2. Fold the card on YOUR backset line, 60 or 70.
3. Hook the fold over the door edge. BOLT CENTRE LINE on your pencil line. Mark the cross bore and its centre. Turn the card over and mark the other side of the door.
4. Tear off the FACE strip.
5. Hold the strip on the door edge. Put both ends of your door's line on the two corners. BOLT CENTRE LINE (the dashed line through the hole) on your pencil line. Mark the edge bore, the recess ends and the two screw centres.

Upper hole: mark it from the paper template in the box.
Door not 40 to 55 mm thick? Call us on 09 238 2377 before you drill.
If anything here differs from the paper template in the box, follow the paper template and call us.

100 mm CHECK BAR. PRINT AT 100%, DO NOT SCALE

Dieline layer, for the die only, never printed: Cut = spot colour Cut (shown magenta): outline, 6 V notches, 2 holes, 2 windows. Perf = spot colour Perf (shown orange): 2 backset fold lines, edge to edge, suggested 1 mm cut / 3 mm tie; 1 FACE strip tear line at x = 63 mm, edge to edge, 3 mm cut / 1 mm tie, starting and ending on a tie. Crease: none. Lines 0.25 pt, overprint. Artwork in black ink only (K).

KS150 DEADBOLT DRILLING TEMPLATE

Keyless Solutions · 09 238 2377 · sales@keylesssolutions.nz · keylesssolutions.nz

KEYLESS SOLUTIONS

STILE INTERNAL / EXTERNAL

UPPER HOLE IS NOT ON THIS CARD
Mark it and drill it from the paper template in the box,
on your backset line, at the size printed there.

BACKSET 60 (2 3/8 in): FOLD HERE

BACKSET 70 (2 3/4 in): FOLD HERE

TEAR OFF THE FACE STRIP HERE

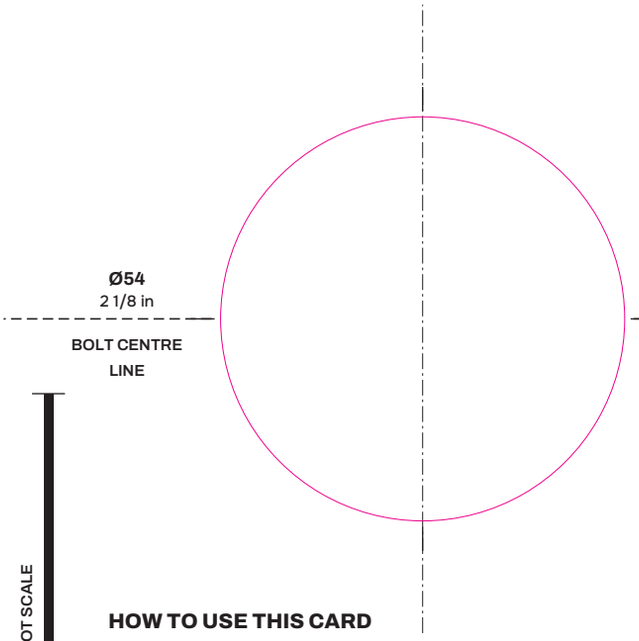

100 mm CHECK BAR. PRINT AT 100%, DO NOT SCALE

HOW TO USE THIS CARD

1.  Draw a pencil line across the door face and the door edge where you want the bolt.
2.  Fold the card on YOUR backset line, 60 or 70.
3.  Hook the fold over the door edge. BOLT CENTRE LINE on your pencil line. Mark the cross bore and its centre. Turn the card over and mark the other side of the door.
4.  Tear off the FACE strip.
5.  Hold the strip on the door edge. Put both ends of your door's line on the two corners. BOLT CENTRE LINE (the dashed line through the hole) on your pencil line. Mark the edge bore, the recess ends and the two screw centres.

Upper hole: mark it from the paper template in the box.
Door not 40 to 55 mm thick? Call us on 09 238 2377 before you drill.
If anything here differs from the paper template in the box, follow the paper template and call us.

BACKSET 60 (2 3/8 in): FOLD HERE

BACKSET 70 (2 3/4 in): FOLD HERE

FACE

door edge

Set the latch to your backset first. UP on the latch at the top.

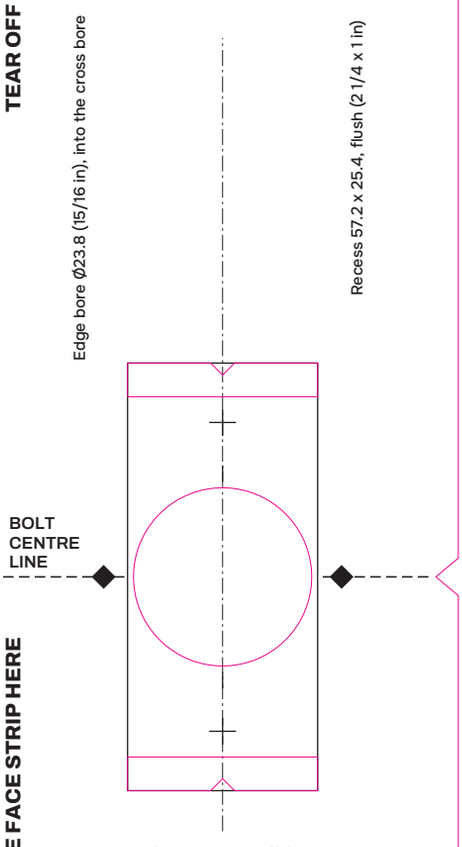

TEAR OFF THE FACE STRIP HERE

DOOR THICKNESS

Put both ends of your door's line on the two corners of the door edge. The strip is now centred.

- 40 mm door
- 45 mm door
- 50 mm door
- 55 mm door