KS200

LATCH DRILLING TEMPLATE

KEYLESS SOLUTIONS

STRIKE

door frame

Strike plate rebate
62 x 27.5, 2.5 deep

Strike box pocket
30 x 24, 13 deep

Lip 27 long
mark its run from the strike plate

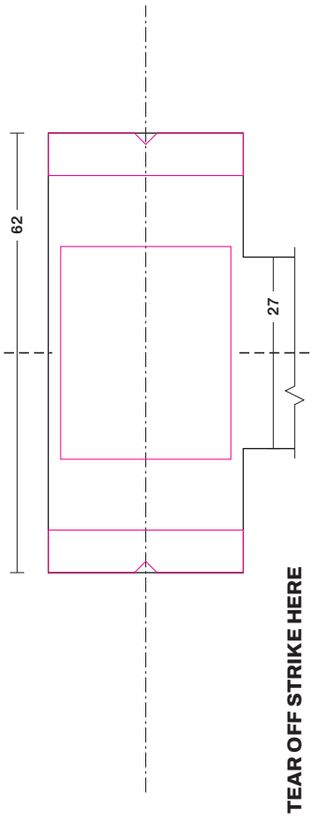

TEAR OFF STRIKE HERE

TEAR OFF STRIKE HERE

HOW TO USE THIS CARD

1. Draw a pencil line across the door face and the door edge where you want the handle.
2. Fold the card on YOUR backset line, 60 or 70, the one you set the latch to.
3. Hook the fold over the door edge. HANDLE LINE on your pencil line. Mark the hole centres through the small holes. Turn the card over and mark the other side of the door.
4. Tear off the FACE strip.
5. Hold the strip on the door edge. Put both ends of your door's line on the two corners. HANDLE LINE on your pencil line. Mark the faceplate ends and the 25 mm bore.
6. Tear off STRIKE. Mark the frame from the same handle line. Strike centre line on the latch centre, not on the torn edge.

BACKSET 70: FOLD HERE

BACKSET 70: FOLD HERE

BACKSET 60: FOLD HERE

BACKSET 60: FOLD HERE

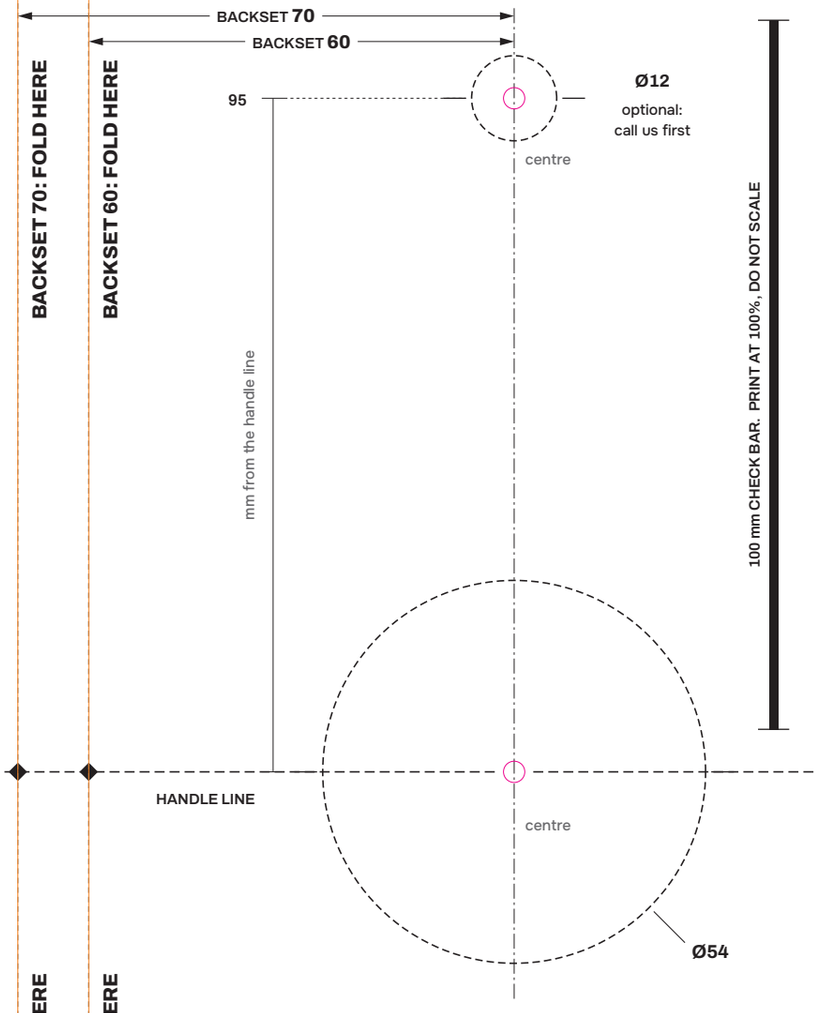

STILE INTERNAL / EXTERNAL

Use this card rather than the paper template in the box: some sizes are corrected. Unsure? Call us.

Keyless Solutions
09 238 2377
sales@keylesssolutions.nz
keylesssolutions.nz

TEAR OFF THE FACE STRIP HERE

TEAR OFF THE FACE STRIP HERE

FACE

door edge

Faceplate rebate
57.5 x 25, 3 deep

Edge bore Ø25
100 deep, into the 54 mm hole

DOOR THICKNESS

Put both ends of your door's line on the two corners of the door edge. The strip is now centred.

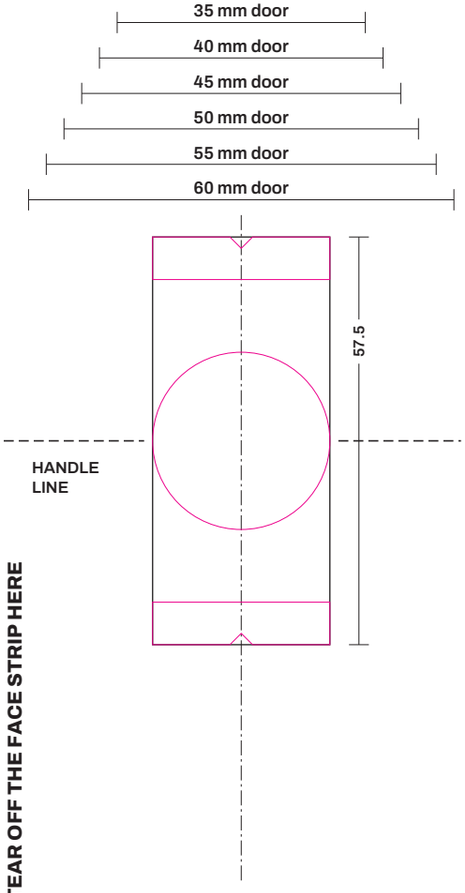

TEAR OFF THE FACE STRIP HERE

TEAR OFF THE FACE STRIP HERE

FACE

door edge

Faceplate rebate
57.5 x 25, 3 deep

Edge bore Ø25
100 deep, into the 54 mm hole

DOOR THICKNESS

Put both ends of your door's line on the two corners of the door edge. The strip is now centred.

35 mm door
40 mm door
45 mm door
50 mm door
55 mm door
60 mm door

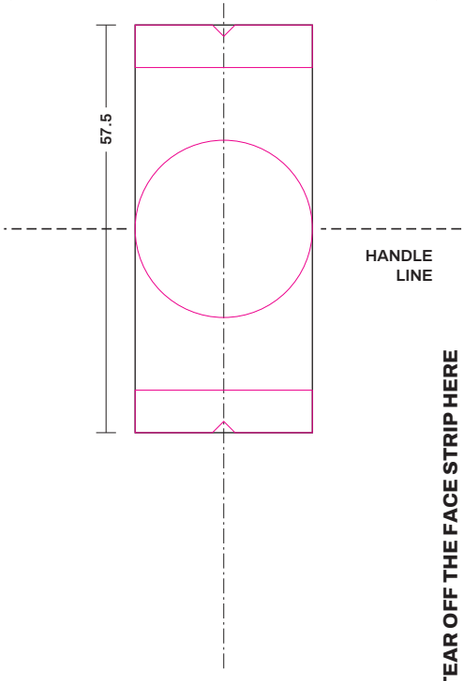

TEAR OFF THE FACE STRIP HERE

KEYLESS SOLUTIONS

KS200

LATCH DRILLING TEMPLATE

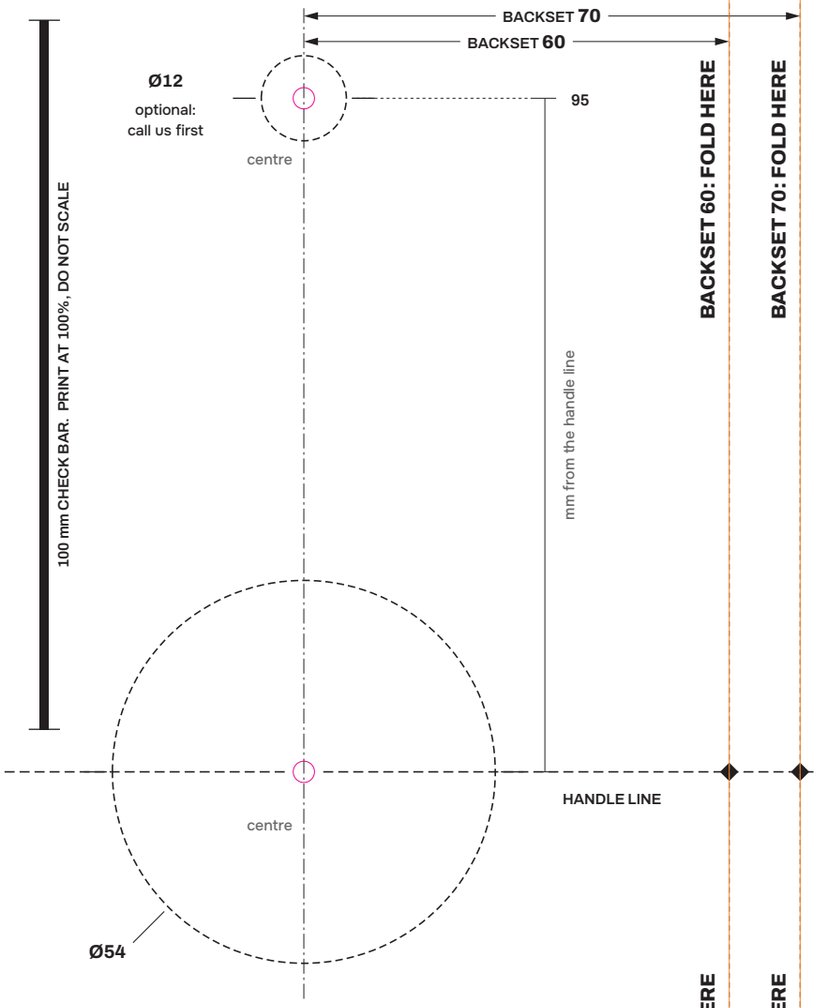

BACKSET 60: FOLD HERE

BACKSET 70: FOLD HERE

HOW TO USE THIS CARD

1. Draw a pencil line across the door face and the door edge where you want the handle.
2. Fold the card on YOUR backset line, 60 or 70, the one you set the latch to.
3. Hook the fold over the door edge. HANDLE LINE on your pencil line. Mark the hole centres through the small holes. Turn the card over and mark the other side of the door.
4. Tear off the FACE strip.
5. Hold the strip on the door edge. Put both ends of your door's line on the two corners. HANDLE LINE on your pencil line. Mark the faceplate ends and the 25 mm bore.
6. Tear off STRIKE. Mark the frame from the same handle line. Strike centre line on the latch centre, not on the torn edge.

TEAR OFF STRIKE HERE

STRIKE

door frame

Strike plate rebate
62 x 27.5, 2.5 deep

Strike box pocket
30 x 24, 13 deep

Lip 27 long
mark its run from the strike plate

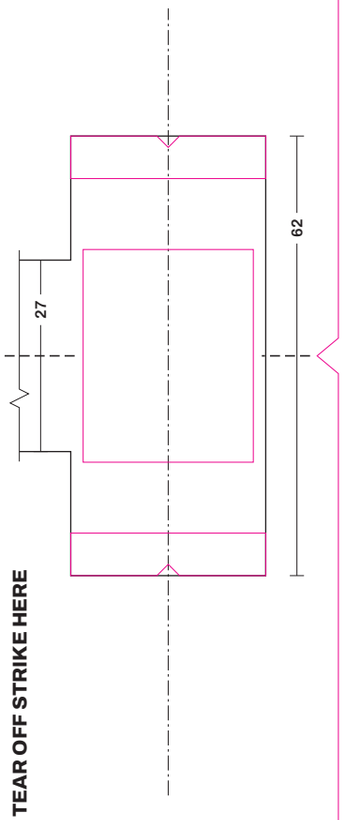

TEAR OFF STRIKE HERE

STILE INTERNAL / EXTERNAL

Use this card rather than the paper template in the box: some sizes are corrected. Unsure? Call us.

Keyless Solutions
09 238 2377
sales@keylesssolutions.nz
keylesssolutions.nz

BACKSET 60: FOLD HERE

BACKSET 70: FOLD HERE