KEYLESS SOLUTIONS

KSL LATCH DRILLING TEMPLATE

Keyless Solutions · 09 238 2377
sales@keylesssolutions.nz · keylesssolutions.nz

STRIKE

door frame

Strike plate rebate
62 x 28

Strike box pocket
36 x 22

Lip 27 long

TEAR OFF STRIKE HERE

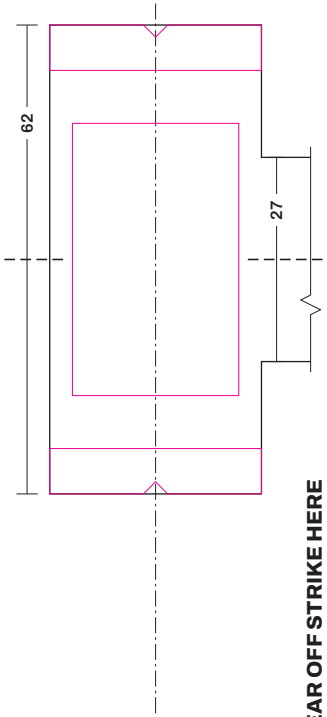

TEAR OFF STRIKE HERE

FACE

door edge

Faceplate rebate
58 x 27

Edge bore Ø25
into the 50 mm hole

TEAR OFF THE FACE STRIP HERE

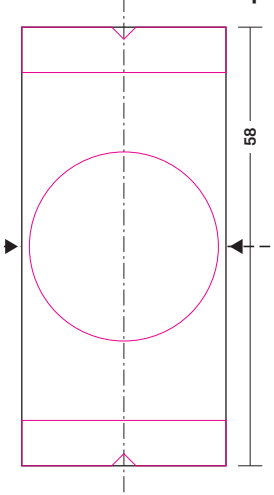

CENTRE THE STRIP



Same gap each side, or the same overhang if your door is thinner than the strip. The strip is then centred.

BACKSET 70: FOLD HERE

BACKSET 60: FOLD HERE

HOW TO USE THIS CARD

1.  Draw a pencil line across the door face and the door edge where you want the handle.
2.  Fold the card on YOUR backset line, 60 or 70.
3.  Hook the fold over the door edge. HANDLE LINE on your pencil line. Mark the centre through the small hole. Turn the card over and mark the other side of the door.

STILE

INTERNAL / EXTERNAL

If anything here differs from the paper template in the box, follow the paper template and call us.

Ask us whether the KSL suits your door's thickness before you drill.

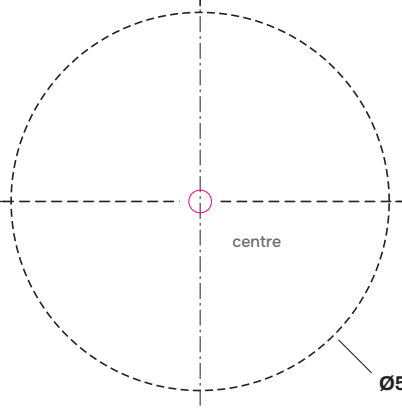

100 mm CHECK BAR. PRINT AT 100%, DO NOT SCALE

BACKSET 60: FOLD HERE

BACKSET 70: FOLD HERE

4.  Tear off the FACE strip, then tear STRIKE off it.
5.  Hold the FACE strip flat on the door edge, HANDLE LINE on your pencil line, with the same gap each side (or the same overhang). Mark the faceplate ends and the 25 mm bore.
6.  Mark the frame with STRIKE from the same handle line. Strike centre line on the latch centre, not on the torn edge.

Dieline layer, for the die only and never printed. Cut = spot colour Cut (shows magenta): through-cut outline, V notches, centre hole, 25 mm edge bore and windows. Perf = spot colour Perf (shows orange): 2 tear-off lines (x 48, x 90), 3 mm cut / 1 mm tie, starting and ending on a tie; 2 backset fold lines, suggested 1 mm cut / 3 mm tie. No Crease. Every dieline 0.25 pt, overprint. Black ink only.

KSL latch card template v1.1, 14 Oct 2026. BACK, page 2 of 2, the mirror image of page 1: register it to page 1. Flat size 206 x 179 mm at the trim, 6 mm bleed, crop marks. PRINT AT 100%, DO NOT SCALE: the 100 mm check bar on the card must measure 100 mm. Print only after a measured physical cut sample.

KSL LATCH DRILLING TEMPLATE

Keyless Solutions · 09 238 2377
sales@keylesssolutions.nz · keylesssolutions.nz

KEYLESS SOLUTIONS

STILE

INTERNAL / EXTERNAL

If anything here differs from the paper template in the box, follow the paper template and call us.

Ask us whether the KSL suits your door's thickness before you drill.

100 mm CHECK BAR. PRINT AT 100%, DO NOT SCALE

centre

HANDLE LINE

Ø50

HOW TO USE THIS CARD

1. Draw a pencil line across the door face and the door edge where you want the handle.
2. Fold the card on YOUR backset line, 60 or 70.
3. Hook the fold over the door edge. HANDLE LINE on your pencil line. Mark the centre through the small hole. Turn the card over and mark the other side of the door.
4. Tear off the FACE strip, then tear STRIKE off it.
5. Hold the FACE strip flat on the door edge, HANDLE LINE on your pencil line, with the same gap each side (or the same overhang). Mark the faceplate ends and the 25 mm bore.
6. Mark the frame with STRIKE from the same handle line. Strike centre line on the latch centre, not on the torn edge.

BACKSET 60: FOLD HERE

BACKSET 70: FOLD HERE

TEAR OFF THE FACE STRIP HERE

FACE

door edge

Faceplate rebate
58 x 27

Edge bore Ø25
into the 50 mm hole

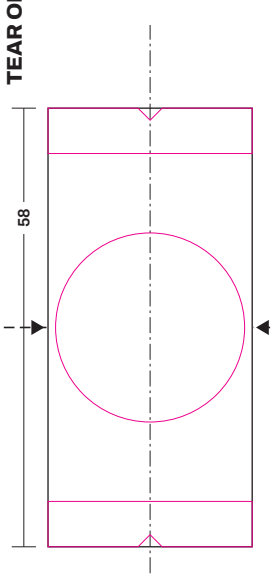

CENTRE THE STRIP



Same gap each side, or the same overhang if your door is thinner than the strip. The strip is then centred.

TEAR OFF STRIKE HERE

STRIKE

door frame

Strike plate rebate
62 x 28

Strike box pocket
36 x 22

Lip 27 long

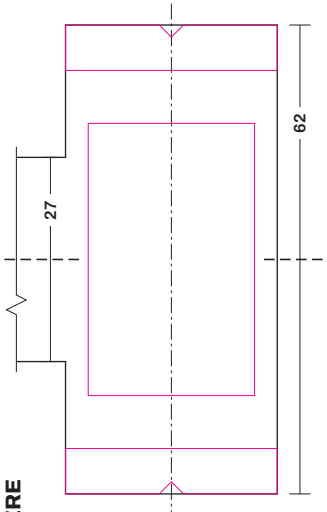

BACKSET 60: FOLD HERE

BACKSET 70: FOLD HERE

TEAR OFF STRIKE HERE

Dieline layer, for the die only and never printed. Cut = spot colour Cut (shows magenta): through-cut outline, V notches, centre hole, 25 mm edge bore and windows. Perf = spot colour Perf (shows orange): 2 tear-off lines (x 48, x 90), 3 mm cut / 1 mm tie, starting and ending on a tie; 2 backset fold lines, suggested 1 mm cut / 3 mm tie. No Crease. Every dieline 0.25 pt, overprint. Black ink only.